
# PSR-...-24UC/ESAM4/8X1/1X2

# Safety relay for emergency stop and safety door monitoring

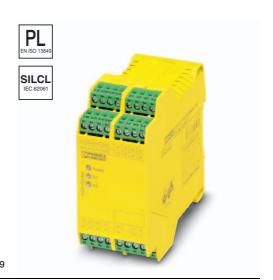

Data sheet 100021\_en\_05

© PHOENIX CONTACT 2016-04-29

#### 1 **Description**

#### **Intended Use**

The safety relay is used for the emergency stop and safety door monitoring.

The safety relay interrupts circuits in a safety-related way.

#### Possible signal generators

- Emergency stop button
- Door locking mechanisms

## Contact type

- 8 undelayed enabling current paths
- 1 undelayed enabling current path

The enabling current paths and the signaling current path drop out without delay according to stop category 0 (EN 60204-1).

#### Control

- Single or two channel
- Automatic or manual, monitored start

#### Achievable safety integrity

Suitable up to category 4, PL e (EN ISO 13849-1), SILCL 3 (EN 62061)

#### **Additional features**

- Cross circuiting detection
- Option of screw or spring-cage terminal blocks for plug-
- 45 mm housing width

#### **Approvals**









# WARNING: Risk of electric shock

Observe the safety regulations and installation notes in the corresponding section.



Make sure you always use the latest documentation.

It can be downloaded from the product at phoenixcontact.net/products.



This document is valid for the products listed in the "Ordering data".

This document meets the same requirements as the original operating instructions with respect to the contents.



<b>2</b> 1	Table of contents  Description	. 1
2	Table of contents	. 2
3	Ordering data	. 3
4	Technical data	. 3
5	Safety regulations and installation notes	. 7
6	Function description  6.1 Single-channel sensor circuit  6.2 Two-channel sensor circuit  6.3 Automatic start  6.4 Manual, monitored start.  6.5 Safe shutdown	. 8 . 8 . 8
7	Function and time diagrams	. 8
8	Basic circuit diagram	. 9
9	Derating	
10	Load curve	
11	Operating and indication elements  11.1 Connection versions  11.2 Connection assignment.	10
12	Mounting and removing	11
13	Wiring	11 12
14	Startup	
15	Calculating the power dissipation	12
16	Diagnostics	12
17	Application examples  17.1 Single-channel emergency stop monitoring  17.2 Two-channel emergency stop monitoring  17.3 Single-channel safety door monitoring  17.4 Two-channel safety door monitoring	13 14 15
18	Attachment	17

# 3 Ordering data

Description	Туре	Order No.	Pcs./Pkt.
Safety relay for emergency stop and safety door monitoring up to SIL 3 or Cat. 4, PL e according to EN ISO 13849, single- or two-channel operation, 8 enabling current paths, $U_S = 24 \text{ V}$ AC/DC, plug-in screw terminal block		2963912	1
Safety relay for emergency stop and safety door monitoring up to SIL 3 or Cat. 4, PL e according to EN ISO 13849, single- or two-channel operation, 8 enabling current paths, $U_S = 24 \text{ V AC/DC}$ , plug-in spring-cage terminal block		2963996	1
-	_		
Documentation	Туре	Order No.	Pcs./Pkt.
User manual, English, for applications for PSR safety relay	UM EN SAFETY RELAY APPLICATION	2888712	1

# 4 Technical data

Hardware/firmware version		
HW/FW	≥ 10/ (2963912) ≥ 08/ (2963996)	
The technical data and safety characteristics are valid as of the specified	HW/FW version.	
Input data		
-	24 V AC/DC -15 % / +10 %	
Rated control circuit supply voltage U <sub>S</sub>		
Rated control supply current I <sub>S</sub>	typ. 177 mA AC typ. 93 mA DC	
Typical inrush current	2 A ( $\Delta$ t = 10 ms at U <sub>s</sub> ) < 60 mA (with U <sub>s</sub> /I <sub>x</sub> to S10) < 110 mA (with $\dot{U}_{s}/I_{x}$ to S12) > -110 mA (with U <sub>s</sub> /I <sub>x</sub> to S22) < 60 mA (with U <sub>s</sub> /I <sub>x</sub> to S34) < 60 mA (with U <sub>s</sub> /I <sub>x</sub> to S35)	
Current consumption	$<$ 50 mA (with $\rm U_s/I_x$ to S10) $<$ 50 mA (with $\rm U_s/I_x$ to S12) $>$ -50 mA (with $\rm U_s/I_x$ to S22) $\rm 0$ mA (with $\rm U_s/I_x$ to S34) $\rm 0$ mA (with $\rm U_s/I_x$ to S35)	
Power consumption at U <sub>S</sub>	typ. 4.25 W (AC) typ. 2.23 W (DC)	
Voltage at input/start and feedback circuit	24 V DC -15 % / +10 %	
Filter time	2 ms (at A1 in the event of voltage dips at $U_{\rm s}$ )	
	max. 1.5 ms (at S10, S12; test pulse width) 7.5 ms (at S10, S12; test pulse rate) Test pulse rate = 5 x Test pulse width	
Max. permissible overall conductor resistance (Input and reset circuit at $\mathrm{U}_{\mathrm{S}}$ )	approx. 11 $\Omega$ (Input and start circuits at $U_{\mbox{\scriptsize S}})$	
Typical response time at U <sub>s</sub>	< 380 ms (automatic start) < 60 ms (manual start)	
Typical starting time with U <sub>s</sub>	< 500 ms (when controlled via A1)	
Typical release time with $\mathbf{U_s}$	< 20 ms (when controlled via S11/S12 and S21/S22) < 50 ms (when controlled via A1)	
Recovery time	<1s	
Maximum switching frequency	0.5 Hz	
Concurrence input 1/2	∞	
Operating voltage display	1 x green LED	
Status display	2 x green LEDs	
Protective circuit	Surge protection Suppressor diode and varistors	

100021\_en\_05 PHOENIX CONTACT 3/18

Output data	
Contact type	8 enabling current paths 1 signaling current path
Contact material	AgSnO <sub>2</sub>
Minimum switching voltage	5 V AC/DC
Maximum switching voltage	250 V AC/DC (Observe the load curve)
Limiting continuous current	6 A (N/O contact, pay attention to the derating) 6 A (N/C contact)
Maximum inrush current	20 A (Δt ≤ 100 ms)
Inrush current, minimum	10 mA
Sq. Total current $I_{TH}^2 = I_1^2 + I_2^2 + + I_N^2$	50 A <sup>2</sup> (observe derating)
Interrupting rating (ohmic load) max.	144 W (24 V DC, $\tau$ = 0 ms) 288 W (48 V DC, $\tau$ = 0 ms) 110 W (110 V DC, $\tau$ = 0 ms) 88 W (220 V DC, $\tau$ = 0 ms) 1500 VA (250 V AC, $\tau$ = 0 ms)
Maximum interrupting rating (inductive load)	42 W (24 V DC, τ = 40 ms) 42 W (48 V DC, τ = 40 ms) 42 W (110 V DC, τ = 40 ms) 42 W (220 V DC, τ = 40 ms)
Switching capacity min.	50 mW
Mechanical service life	10 x 10 <sup>6</sup> cycles
Switching capacity (360/h cycles)	4 A (24 V DC) 4 A (230 V AC)
Switching capacity (3600/h cycles)	2.5 A (24 V (DC13)) 3 A (230 V (AC15))
Output fuse	10 A gL/gG (N/O contact) 6 A gL/gG (N/C contact)
General data	
Relay type	Electromechanical relay with forcibly guided contacts in accordance with EN 50205
Nominal operating mode	100% operating factor
Degree of protection	IP20
Min. degree of protection of inst. location	IP54
Mounting type	DIN rail mounting
Mounting position	any
Type of housing	PBT yellow
Air clearances and creepage distances between the power circuits	according to DIN EN 50178/VDE 0160
Rated insulation voltage	250 V AC
Rated surge voltage/insulation	Basic insulation 4 kV: between all current paths and housing Safe isolation, reinforced insulation 6 kV: between A1/A2 and 63/64, 73/74, 83/84 between S10/S11/S12/S33/S34/S35 and 63/64, 73/74, 83/84
	between 63/64, 73/74, 83/84 among one another
Degree of pollution	between 63/64, 73/74, 83/84 among one another 2

100021\_en\_05 PHOENIX CONTACT 4/18

Dimensions	Screw connection	Spring-cage connection	
WxHxD	45 x 99 x 114.5 mm	45 x 112 x 114.5 mm	
Connection data	Screw connection	Spring-cage connection	
Conductor cross section, solid	0.2 mm <sup>2</sup> 2.5 mm <sup>2</sup>	0.2 mm² 1.5 mm²	
Conductor cross section, flexible	0.2 mm <sup>2</sup> 2.5 mm <sup>2</sup>	0.2 mm <sup>2</sup> 1.5 mm <sup>2</sup>	
Conductor cross section AWG/kcmil	24 12	24 16	
Stripping length	7 mm	8 mm	
Screw thread	М3		
Ambient conditions			
Ambient temperature (operation)	-20 °C 55 °C (observe derating	g)	
Ambient temperature (storage/transport)	-40 °C 70 °C		
Max. permissible relative humidity (operation)	75 % (on average, 85% infreque	ntly, non-condensing)	
Max. permissible humidity (storage/transport)	75 % (on average, 85% infreque	ntly, non-condensing)	
Maximum altitude	≤ 2000 m (Above sea level)		
Information on operating height	See the "Using PSR devices at a section	lltitudes greater than 2000 m above sea leve	
Shock	15g		
Vibration (operation)	10 Hz150 Hz, 2g		
Conformance / approvals			
Conformance	CE-compliant		
The full EC Declaration of Conformity can be downloaded for	r the product at phoenixcontact.net/products.		
Approvals	com [H[ 📤		
Safety data			
Stop category according to IEC 60204	0		
Safety parameters for IEC 61508 - High den	nand		
SIL	3		
PFH <sub>D</sub>	5.06 x 10 <sup>-10</sup>		
Demand rate	< 12 Months		
Proof test interval	240 Months		
Duration of use	240 Months		
The specifications apply assuming the following calculation b	pasis		
B <sub>10D</sub>	230000 (At 3 A AC15)		
d <sub>op</sub>	365.25 Days		
h <sub>op</sub>	24 h		
<sup>t</sup> Cycle	3600 s		
Safety parameters for IEC 61508 - Low dem	and		
SIL	3		
PFD <sub>avg</sub>	1.48 x 10 <sup>-4</sup>		
Proof test interval	77 Months		
Duration of use	240 Months	240 Months	

100021\_en\_05 PHOENIX CONTACT 5/18

Safety characteristic data according to EN ISO 13849		
Category	4	
Performance level	e	
Duration of use	240 Months	
For applications in PL e, the required demand rate for the safety function is once per month.		
Calculation basis		
B <sub>10D</sub>	230000 (At 3 A AC15)	
d <sub>op</sub>	365.25 Days	
h <sub>op</sub>	24 h	
<sup>†</sup> Cycle	3600 s	
Safety parameters for EN 62061		
SILCL	3	

100021\_en\_05 PHOENIX CONTACT 6/18

# 5 Safety regulations and installation notes



#### WARNING: Death, serious personal injury or damage to equipment

Depending on the application, incorrect handling of the device may pose serious risks for the user or cause damage to equipment.

Observe all the safety notes and warning instructions provided in this chapter and elsewhere in this document.

#### General

 Observe the safety regulations of electrical engineering and industrial safety and liability associations.

Disregarding these safety regulations may result in death, serious personal injury or damage to equipment.

 Only use power supply units with safe isolation and SELV/PELV according to EN 50178/VDE 0160.

#### Startup, mounting, and modifications

Startup, mounting, modifications, and upgrades may only be carried out by an electrically skilled person.

- Before working on the device, disconnect the power.
- Carry out wiring according to the application. Refer to the "Application examples" section for this.

Reliable operation is only ensured if the device is installed in housing protected from dust and humidity.

 Install the device in housing protected from dust and humidity (min. IP54).

#### In operation

During operation, parts of electrical switching devices carry hazardous voltages.

 Protective covers must not be removed when operating electrical switching devices.

For emergency stop applications, automatic startup of the machine can pose serious risks for the user.

 The machine must be prevented from restarting automatically by a higher-level controller.

With the manual, monitored reset device, a machine start may not be triggered in accordance with EN ISO 13849-1.

Inductive loads can lead to welded relay contacts.

- Connect a suitable and effective protective circuit to inductive loads.
- Implement the protective circuit parallel to the load and not parallel to the switch contact.

Noise emission may occur when operating relay modules. Wireless reception may be disrupted in residential areas.

The device is a Class A product.

- Observe the requirements for noise emission for electrical and electronic equipment (EN 61000-6-4).
- Implement appropriate precautions against noise emission.

Surge voltages can destroy the device.

 Make sure that the output voltage of the voltage supply does not exceed 37 V even in the event of error.

#### **Faulty devices**

The devices may be damaged following an error. Correct operation can no longer be ensured.

In the event of an error, replace the device.

Only the manufacturer or their authorized representative may perform the following activities. Otherwise the warranty is invalidated.

- Repairs to the device
- Opening the housing

# Taking out of service and disposal

- Dispose of the device in accordance with environmental regulations.
- Make sure that the device can never be reused.

100021\_en\_05 PHOENIX CONTACT 7/18

# 6 Function description

# 6.1 Single-channel sensor circuit

The sensor circuit is not designed with redundancy.

The safety relay does not detect short and cross-circuits in the sensor circuit.

#### 6.2 Two-channel sensor circuit

The sensor circuit is designed with redundancy.

Depending on the wiring, the safety relay has cross-circuit detection.

With the corresponding wiring, the safety relay detects short and cross-circuits in the sensor circuit.

#### 6.3 Automatic start

The device starts automatically after the sensor circuit has been closed.

#### 6.4 Manual, monitored start

The device starts with closed sensor circuit once the start circuit has been closed by pressing the reset button.

A connected reset button (connected to S33/S34) is monitored.

#### 6.5 Safe shutdown

When the sensor circuit is opened, the enabling current paths 13/14 ... 83/84 open without delay.

When the enabling current paths are open, the device is in the safe state.

The signaling current path closes.

# 7 Function and time diagrams

# 7.1 Time diagram for automatic start, two-channel control

Cross-circuit detection activated

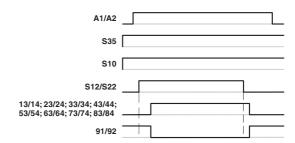


Figure 1 Time diagram for automatic start, two-channel

# 7.2 Time diagram for manual start, single-channel control

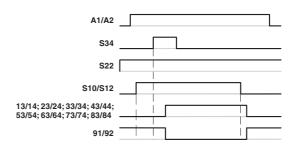


Figure 2 Time diagram for manual start, single-channel control

#### Key:

A1/A2 Power supply

S34
S35
S10 / S12 / S22 Input sensor circuit

13/14 ... 83/84 Undelayed enabling current paths
91/92 Signaling current path, undelayed

100021\_en\_05 PHOENIX CONTACT 8/18

# 8 Basic circuit diagram

# A1 S35 S10 S11 S12 13 23 33 43 53 63 73 83 91

Figure 3 Block diagram

# Key:

A1	24 V AC/DC power supply
A2	0 V power supply
S33, S34, S35	Start and feedback circuit
S10, S12	Input sensor circuit (channel 1)
S11	Output 24 V
S21	Output 0 V
S22	Input sensor circuit (channel 2)
13/14 83/84	Undelayed enabling current paths

# 9 Derating

91/92

# 9.1 Any mounting position

The derating curve applies for the following conditions:

Signaling current path, undelayed

- Mounting on a DIN rail in any mounting position
- Devices mounted next to each other without spacing

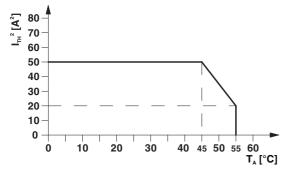


Figure 4 Derating curve - any mounting position, without spacing

# 10 Load curve

## 10.1 Ohmic load

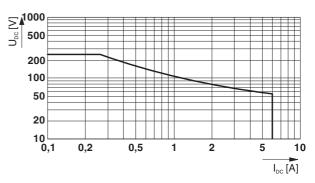


Figure 5 Relay load curve - ohmic load

100021\_en\_05 PHOENIX CONTACT 9/18

# 11 Operating and indication elements

# 11.1 Connection versions

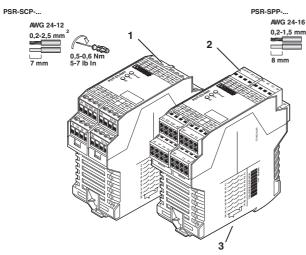


Figure 6 Connection versions

- 1 COMBICON plug-in screw terminal block
- 2 COMBICON plug-in spring-cage terminal block
- 3 Metal lock for fixing to DIN rail

# 11.2 Connection assignment

S12 S34 S33 S35 91 33 43 53 S10 S11 S11 S12 92 34 44 54	\$10, \$12 \$33, \$34, \$35 \$11 91/92 33/34 43/44 53/54	Input sensor circuit (channel 1) Start and feedback circuit Output 24 V Signaling current path, undelayed Undelayed enabling current paths
PSR-ESAM4  C K2  MAC  No Power	Power K1 K2 A1 S21 S22 A2	Power LED (green) Status indicator safety circuit; LED (green) Status indicator safety circuit; LED (green) 24 V AC/DC power supply Output 0 V Input sensor circuit (channel 2) 0 V power supply
A1 S21 S22 A2 83 63 64 13 14 23 24 84 73 74	13/14 23/24 83/84 63/64 73/74	Undelayed enabling current paths

100021\_en\_05 PHOENIX CONTACT 10 / 18

# 12 Mounting and removing

- Mount the device on a 35 mm DIN rail according to EN 60715.
- To remove the device, use a screwdriver to release the snap-on foot.

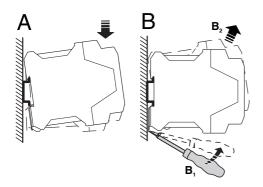


Figure 7 Mounting and removing

# 13 Wiring

 Connect the cables to the connection terminal blocks using a screwdriver.

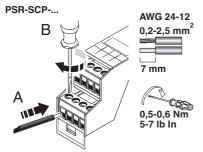


Figure 8 Connecting the cables for PSR-SCP-... (Screw terminal block)

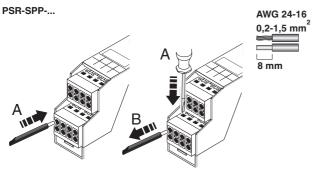


Figure 9 Connecting the cables for PSR-SPP-... (Spring-cage terminal block)




It is recommended that ferrules are used to connect stranded cables.




For compliance with UL approval, use copper wire that is approved up to 60°C/75°C.

# 13.1 Signal generator connection versions

 Connect suitable signal generators to S10/S11/S12 and S21/S22.

 

 

 


Figure 10 Signal generator connection versions

- 1 Two-channel connection with cross-circuit monitoring
- 2 Two-channel connection without cross-circuit monitoring
- 3 Single-channel connection

100021\_en\_05 PHOENIX CONTACT 11 / 18

#### 13.2 Start and feedback circuit connection variants

#### **Automatic start**

• Bridge the contacts S33/S35.

#### Manual, monitored start

Connect a reset button to contacts S33/S34.

A connected reset button is monitored.

#### Start and feedback circuit

 Place the relevant N/C contact in path S33/S34 or S33/ S35 to monitor external contactors or extension devices with force-guided contacts.

 


Figure 11 Start and feedback circuit connection variants

- 1 Automatic start
- 2 Manual, monitored start with monitored contact extension
- 3 Manual, monitored start

# 14 Startup

Apply the rated control circuit supply voltage (24 V AC/DC) at terminal blocks A1/A2.

The Power LED lights up.

Close contacts S10/S11/S12 and S21/S22

#### **Automatic start**

The enabling current paths 13/14 ... 83/84 close. Signaling current path 91/92 opens.

The K1 and K2 LEDs light up.

#### Manual, monitored start

Press the reset button.

The enabling current paths 13/14 ... 83/84 close.

Signaling current path 91/92 opens.

The K1 and K2 LEDs light up.

# 15 Calculating the power dissipation



The total power dissipation of the safety relay is based on the input power dissipation and the contact power dissipation for the same and for different load currents.

#### Input power dissipation

$$P_{lnput} = U_B^2 / (U_S/I_S)$$

# **Contact power dissipation**

With the same load currents:

 $P_{Contact} = n \bullet I_L^2 \bullet 200 \text{ m}\Omega$ 

With different load currents:

 $P_{Contact} = (I_{L1}^2 + I_{L2}^2 + ... + I_{Ln}^2) \cdot 200 \text{ m}\Omega$ 

# **Total power dissipation**

 $P_{Total} = P_{Input} + P_{Contact}$ 

therefore

 $P_{Total} = U_B^2 / (U_S/I_S) + n \cdot I_L^2 \cdot 200 \text{ m}\Omega$ 

or

 $P_{Total} = U_B^2 / (U_S/I_S) + (I_{L1}^2 + I_{L2}^2 + ... + I_{Ln}^2) \cdot 200 \text{ m}\Omega$ 

#### Key:

P Power dissipation in mW

**U**<sub>B</sub> Applied operating voltage

Us Rated control circuit supply voltage

 $I_S$  Rated control supply current

n Number of enabling current paths used

I<sub>I</sub> Contact load current

# 16 Diagnostics

For the diagnostic description, please refer to the application manual for PSR safety relays.

#### Function test/proof test



Use the function test to test the safety function. To do this, request the safety function once by pressing the emergency stop button, for example. Check whether the safety function is executed correctly by then switching the device on again via the sensor circuits.

# 17 Application examples

# 17.1 Single-channel emergency stop monitoring

- Manual, monitored start
- Monitoring of external contactors
- Suitable up to category 1, PL c (EN ISO 13849-1), SIL 1 (EN 62061)

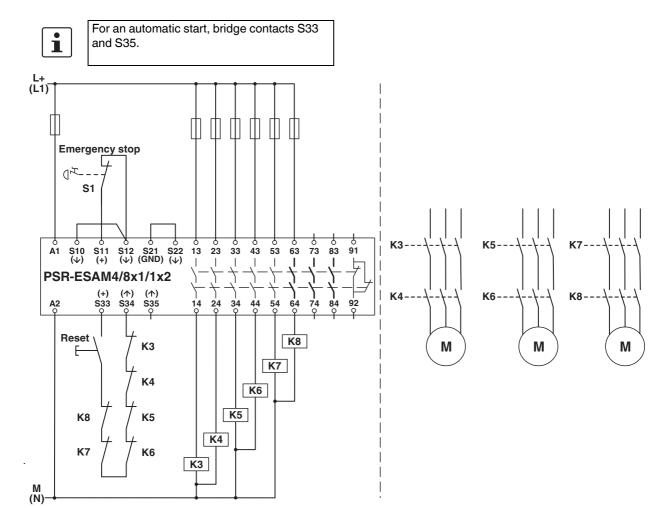


Figure 12 Single-channel emergency stop monitoring

Key:

**S1** Emergency stop button

## 17.2 Two-channel emergency stop monitoring

- Manual, monitored start
- Monitoring of external contactors
- Cross circuiting detection
- Suitable up to category 4, PL e (EN ISO 13849-1),
- SIL 3 (EN 62061)

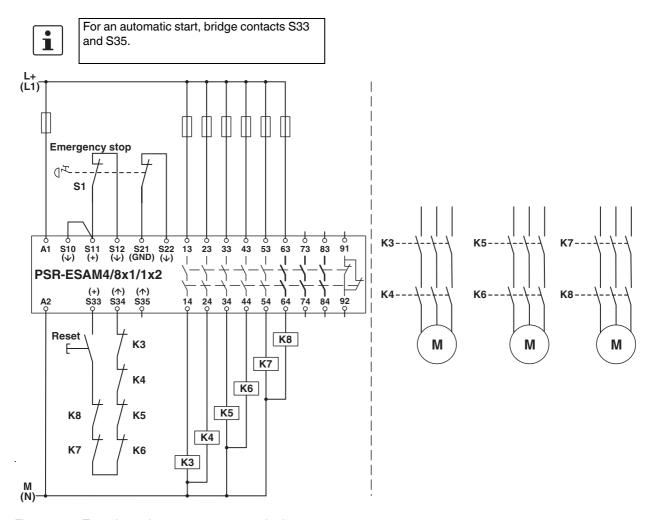


Figure 13 Two-channel emergency stop monitoring

# Key:

S1 Emergency stop button

# 17.3 Single-channel safety door monitoring

- Manual, monitored start
- Monitoring of external contactors
- Suitable up to category 1, PL c (EN ISO 13849-1), SIL 1 (EN 62061)



For an automatic start, bridge contacts S33 and S35.

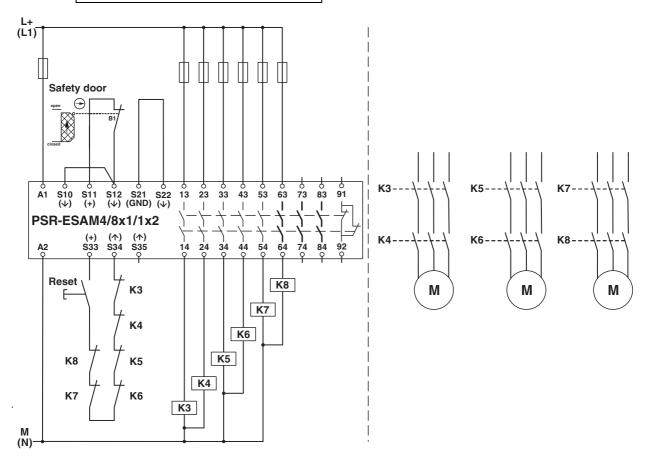



Figure 14 Single-channel safety door monitoring

# Key:

# B1 Mechanical safety door switch

## 17.4 Two-channel safety door monitoring

- Manual, monitored start
- Monitoring of external contactors
- Cross circuiting detection
- Suitable up to category 4, PL e (EN ISO 13849-1), SIL 3 (EN 62061)

 

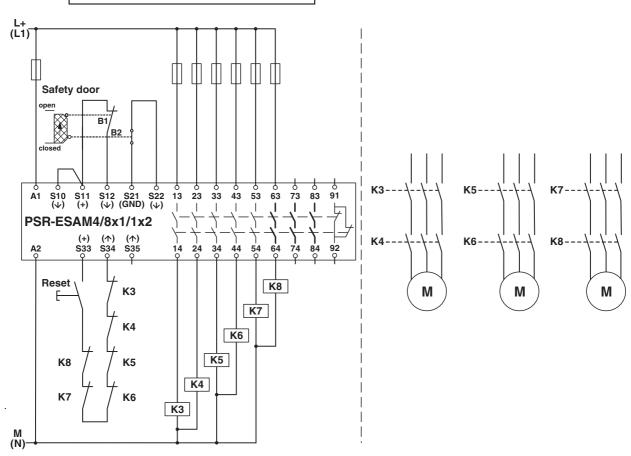


Figure 15 Two-channel safety door monitoring

Key:

B1/B2 Mechanical safety door switches

## 18 Attachment

# 18.1 Using PSR devices at altitudes greater than 2000 m above sea level



The following section describes the special conditions for using PSR devices at altitudes greater than 2000 m above sea level.

Observe the relevant device-specific data (technical data, derating, etc.) according to the product documentation for the individual device.

Using the device at altitudes **greater** than 2000 m above sea level up to max. 4500 m above sea level is possible under the following conditions:

 Limit the rated control circuit supply voltage (U<sub>S</sub>) in accordance with the table below. Observe the technical data for the device.

U <sub>S</sub> according to the technical data for the device	U <sub>S</sub> when used at altitudes greater than 2000 m above sea level
< 150 V AC/DC	U <sub>S</sub> according to the technical data for the device still valid
> 150 V AC/DC	Limited to max. 150 V AC/ DC

2. Limit the maximum switching voltage in accordance with the table below. Observe the technical data for the device.

Max. switching voltage according to the technical data for the device	Max. switching voltage when used at altitudes greater than 2000 m above sea level
< 150 V AC/DC	Max. switching voltage according to the technical data for the device still valid
> 150 V AC/DC	Limited to max. 150 V AC/DC

- Reduce the maximum ambient temperature for operation by the corresponding factor in accordance with the table below.
- If derating is specified, offset all the points of the derating curve by the corresponding factor in accordance with the table below.

Altitude above sea level	Temperature derating factor
2000 m	1
2500 m	0.953
3000 m	0.906
3500 m	0.859
4000 m	0.813
4500 m	0.766

#### Example calculation for 3000 m



The following calculation and the illustrated derating curve are provided as examples. Perform the actual calculation and offset the derating curve for the device used according to the technical data and the "Derating" section.

27 °C • 0.906 ≈ 24 °C 55 °C • 0.906 ≈ 49 °C

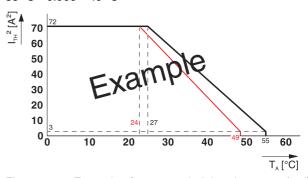


Figure 16 Example of a suspended derating curve (red)

100021\_en\_05 PHOENIX CONTACT 17 / 18

# 18.2 Revision history

Version	Date	Contents
05	2016-02-03	New edition of the data sheet